

FIG.1

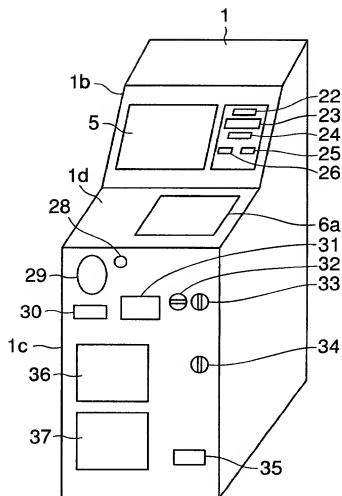 


FIG.2

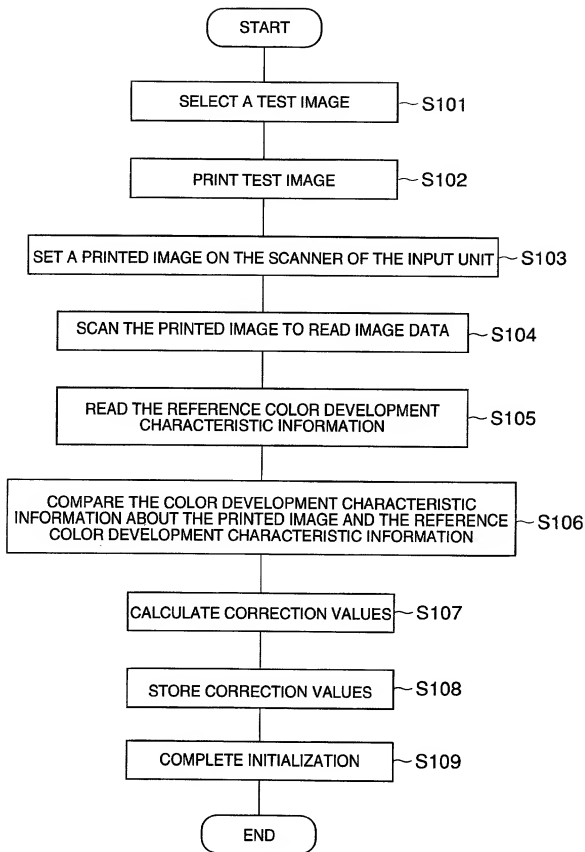 


FIG.3

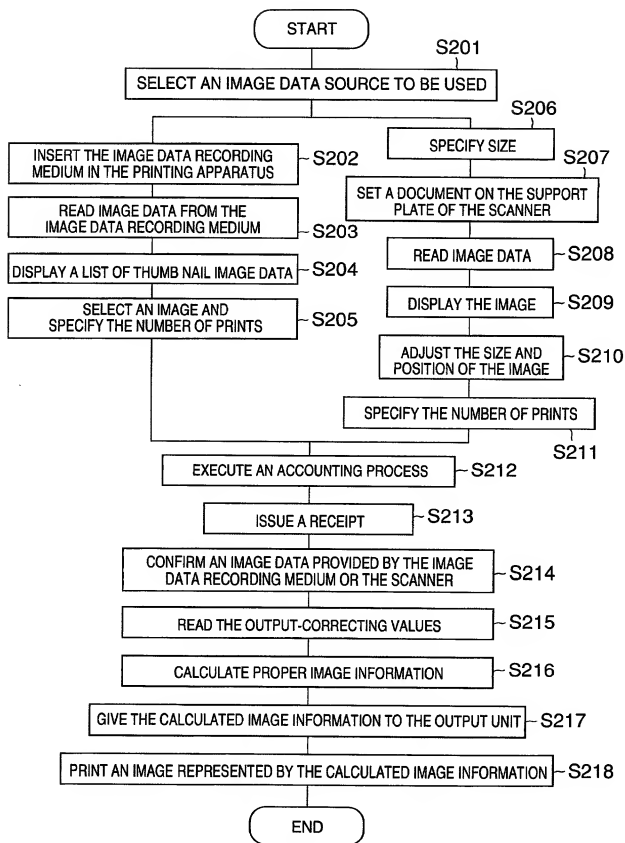 


FIG. 4

WELCOME  
TO DIGITAL  
PHOTOGRAPHIC PRINTING

FIG.5

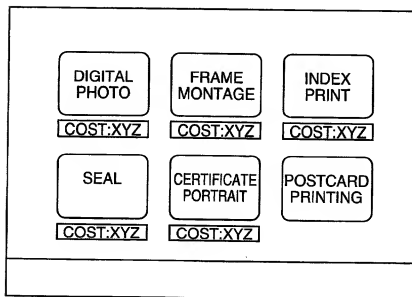 


FIG.6

SELECT INPUT MEDIUM

SMART CARD	CF CARD	FD
PC CARD	CD-ROM	PHOTOGRAPH (SCANNER)

CANCEL PAGE UP

FIG.7

SELECT READ SIZE

PHOTOGRAPH SIZE	A5
--------------------	----

CANCEL PAGE UP

FIG.8

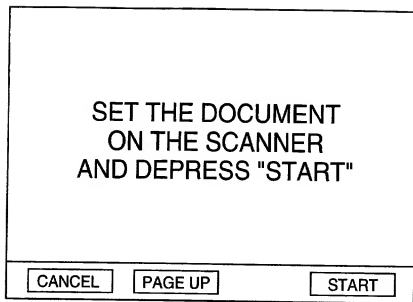 


FIG. 9

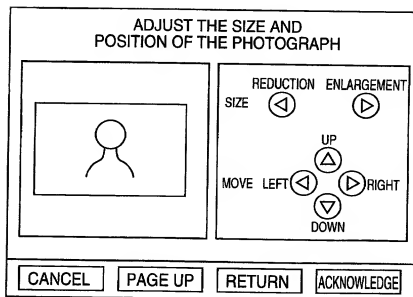 


FIG. 10

8/16

SPECIFY THE NUMBER OF PRINTS

NUMBER  . . . 

▲

▼

FIG.11

PAY MONEY

NUMBER

UNIT PRICE

SUM

---

MONEY DEPOSITED

FIG.12



9/16

DEPRESS "ACKNOWLEDGE"  
WHEN THE ORDER IS CORRECT

NUMBER

UNIT PRICE

THE SUM

FIG.13

TAKE THE DOCUMENT OUT OF THE SCANNER  
AND DEPRESS "PRINT"

FIG.14

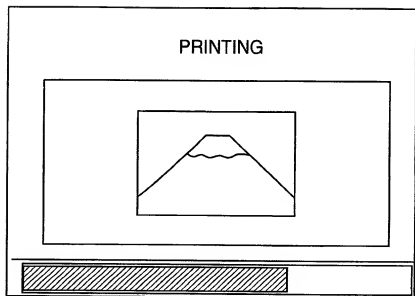 


FIG. 15

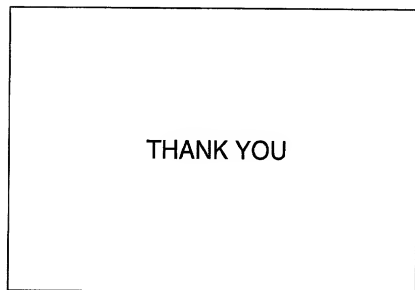 


FIG. 16

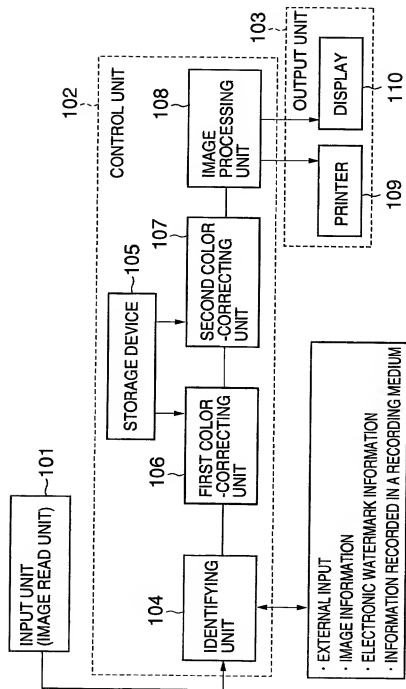 


FIG.17

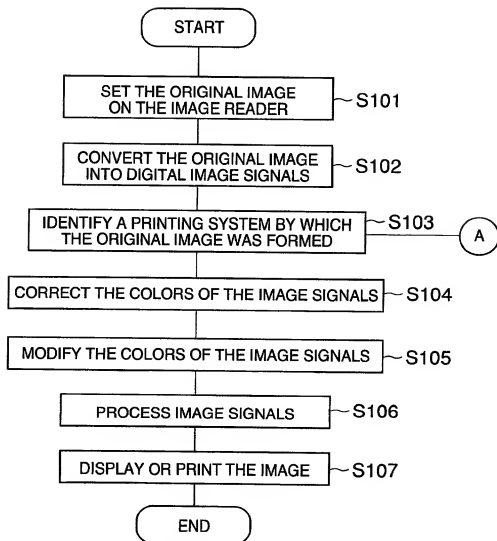 


FIG.18

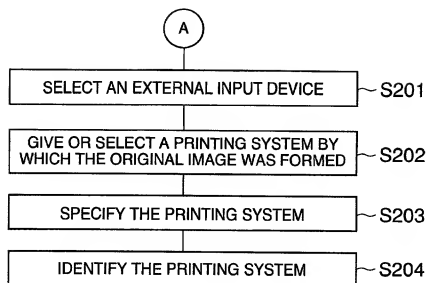 


FIG.19

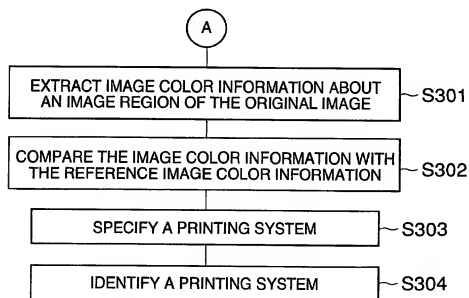 


FIG.20

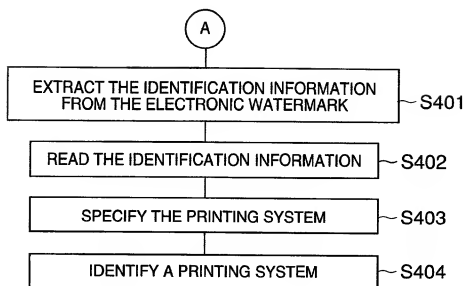 


FIG.21

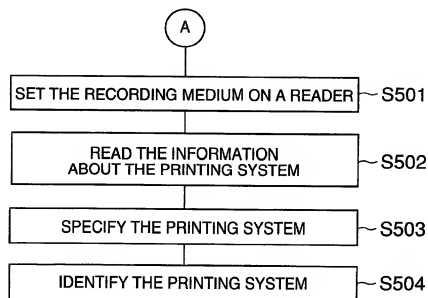 


FIG.22

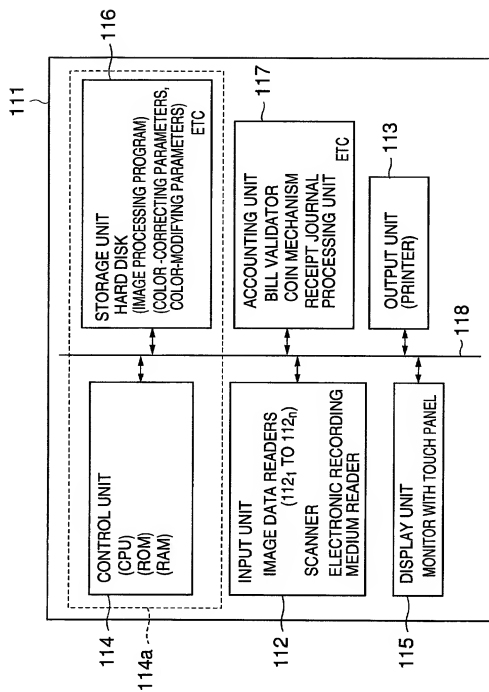 


FIG.23

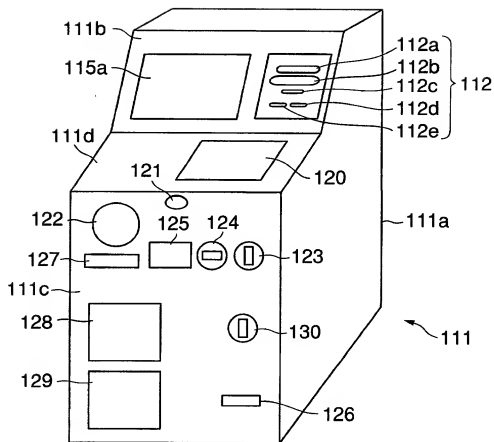 


FIG. 24